




**Tømming og klargjøring av  
temperaturlogger Escort iMiniPlus PDF  
kontrahert personell – akkreditert prøvetaking**




**Knappen RA  
Fredag 22. november 2013**

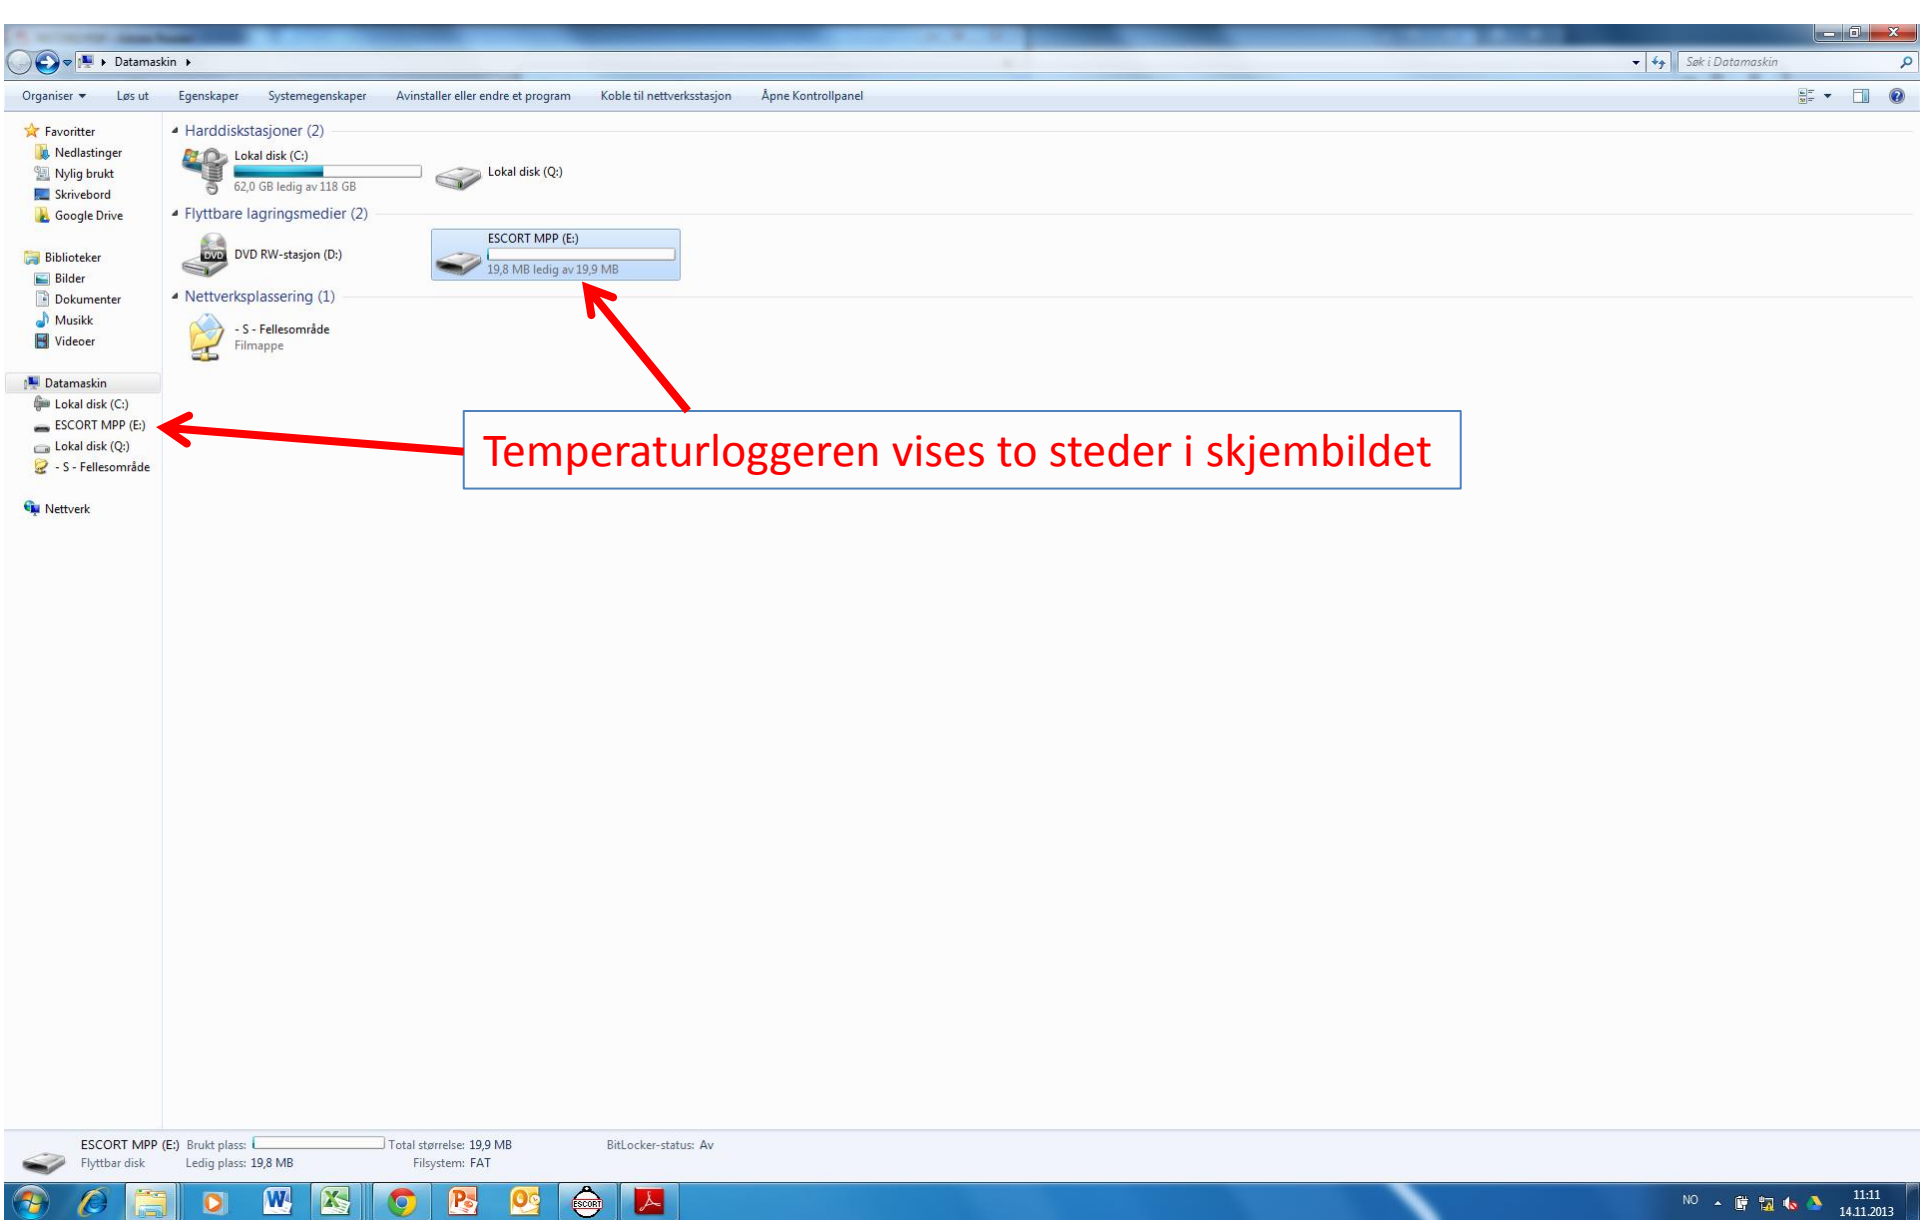

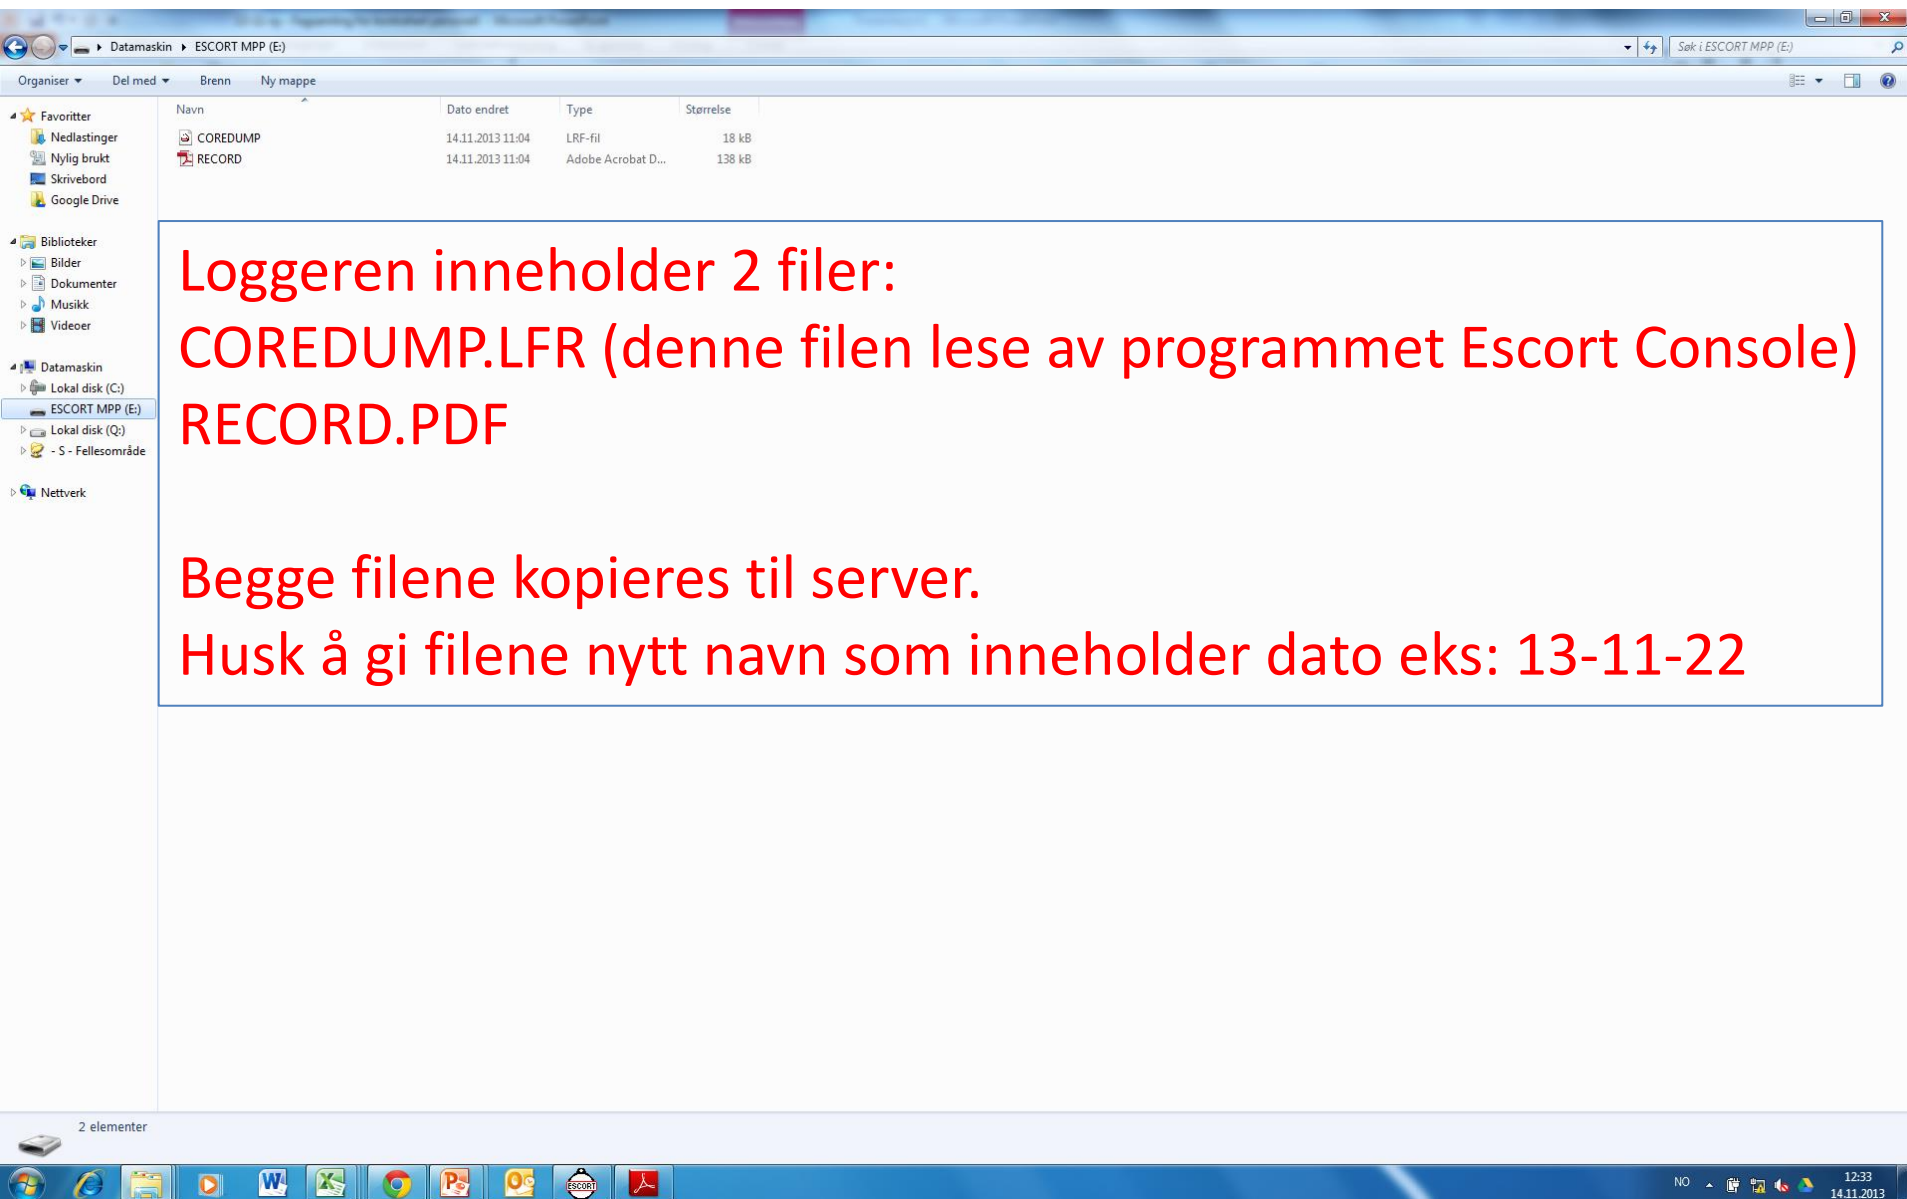

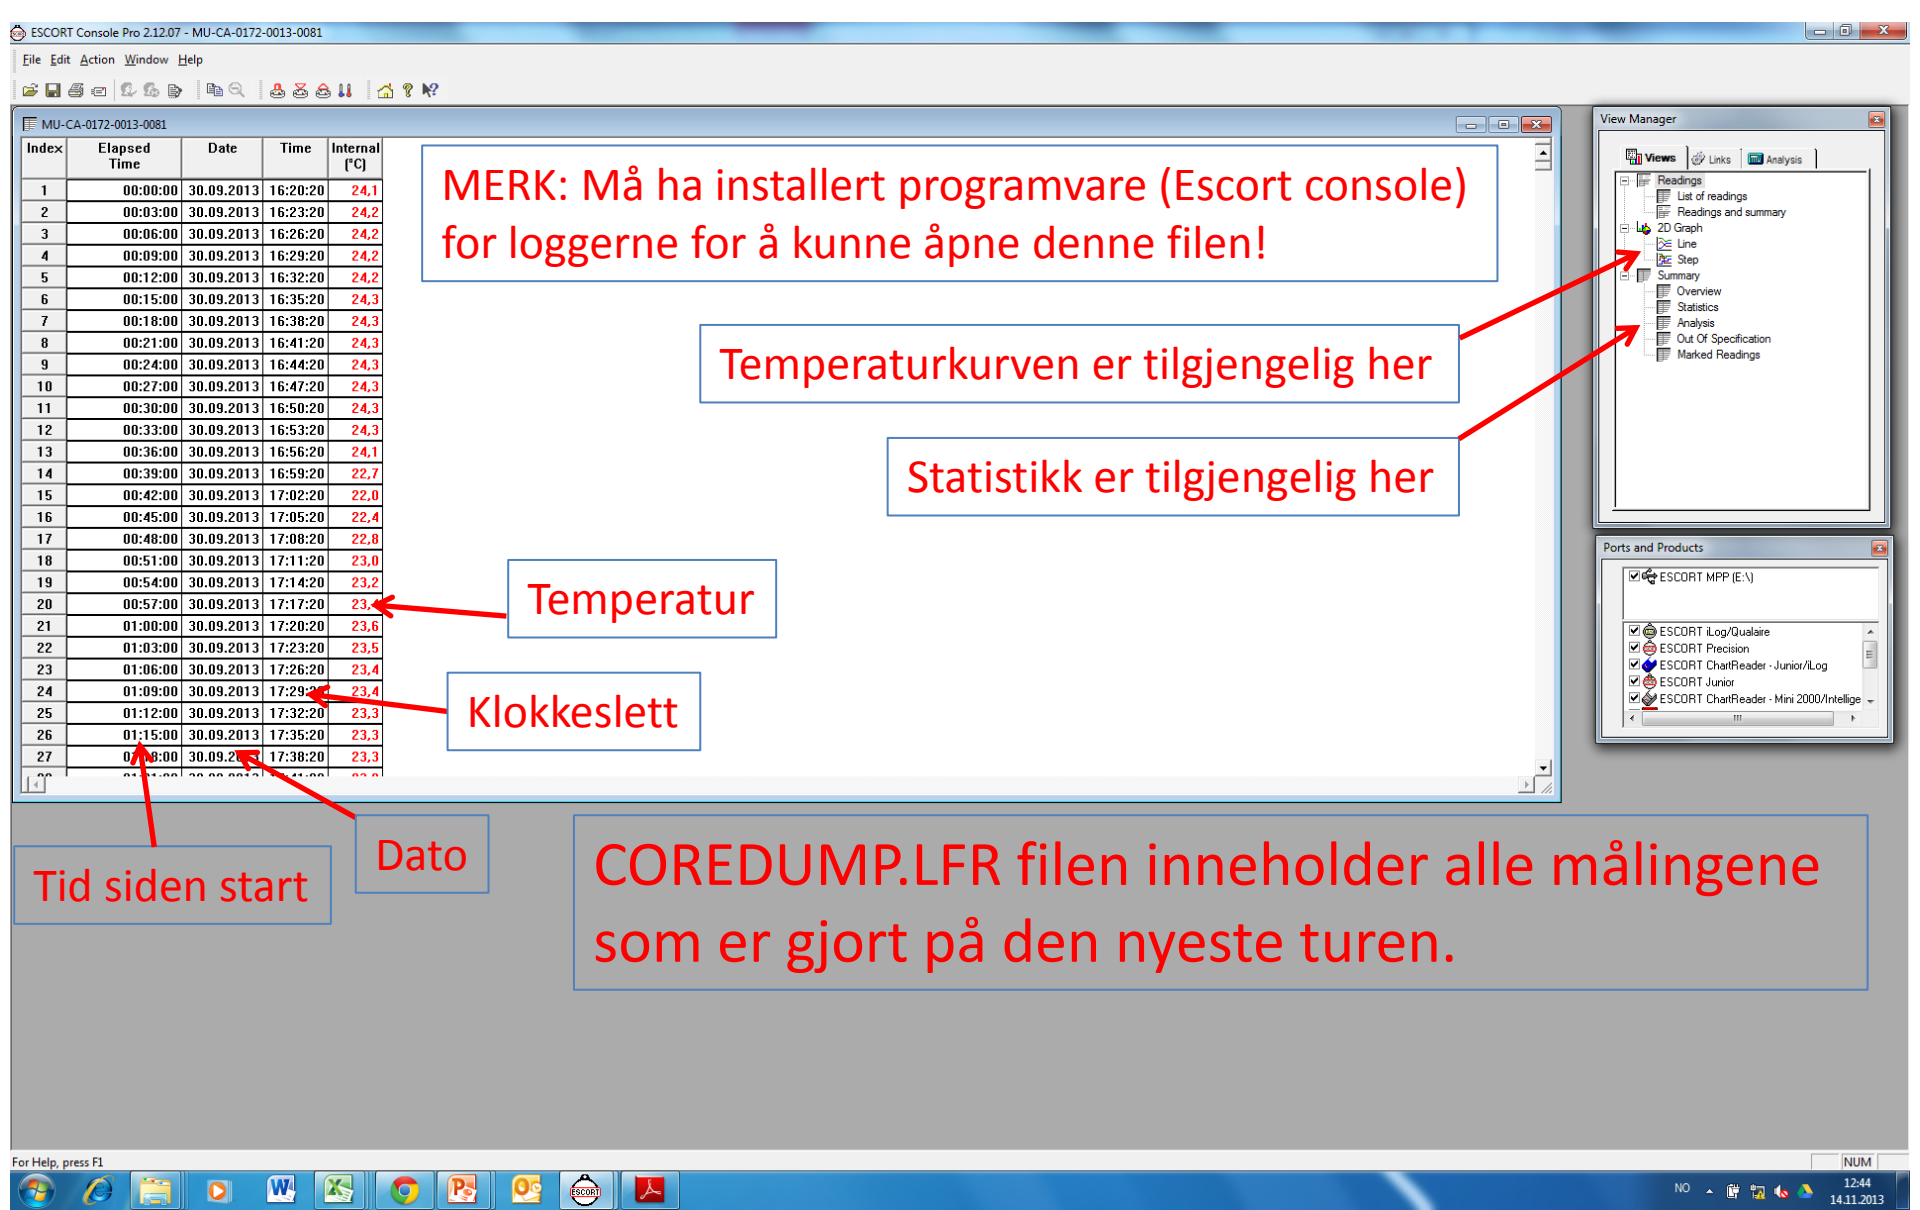

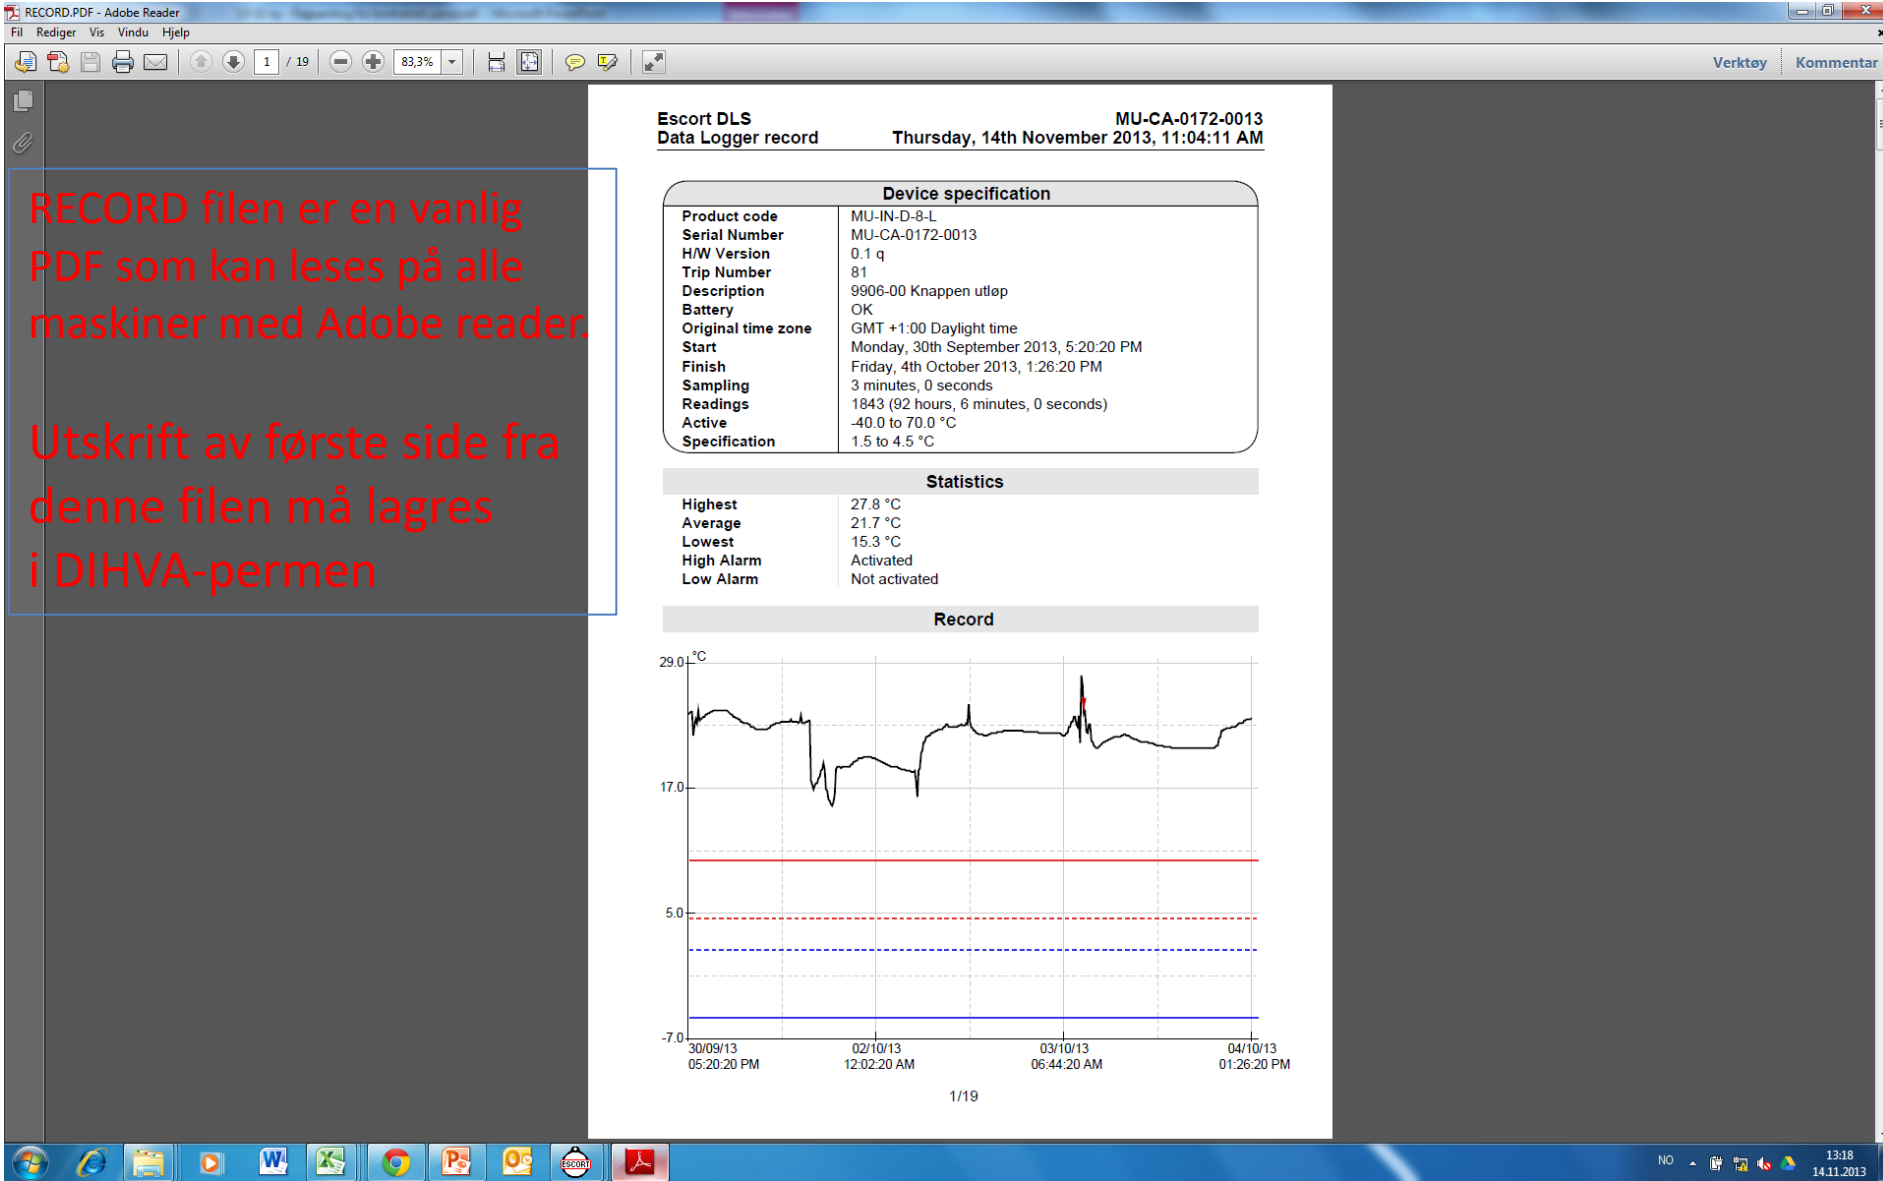


RECORD filen er en vanlig PDF som kan leses på alle maskiner med Adobe reader.  
Utskrift av første side fra denne filen må lagres i DIHVA-permen

**Escort DLS** MU-CA-0172-0013  
**Data Logger record** Thursday, 14th November 2013, 11:04:11 AM


Device specification	
Product code	MU-IN-D-8-L
Serial Number	MU-CA-0172-0013
H/W Version	0.1 q
Trip Number	81
Description	9906-00 Knappen utløp
Battery	OK
Original time zone	GMT +1:00 Daylight time
Start	Monday, 30th September 2013, 5:20:20 PM
Finish	Friday, 4th October 2013, 1:26:20 PM
Sampling	3 minutes, 0 seconds
Readings	1843 (92 hours, 6 minutes, 0 seconds)
Active	-40.0 to 70.0 °C
Specification	1.5 to 4.5 °C

Statistics	
Highest	27.8 °C
Average	21.7 °C
Lowest	15.3 °C
High Alarm	Activated
Low Alarm	Not activated

**Record**

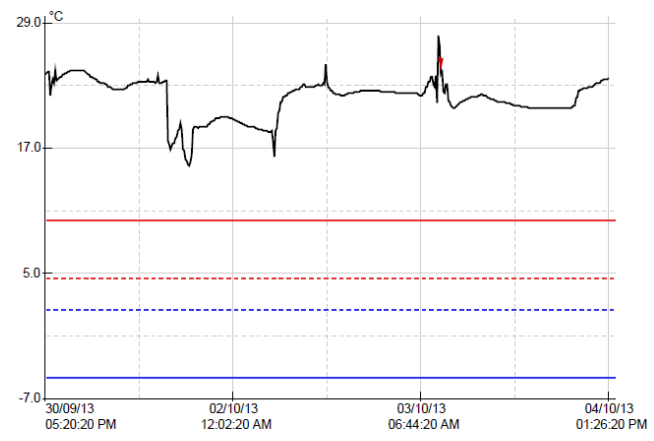


For å klargjøre / nullstille temperaturloggeren til en ny tur  
må den kobles til en PC hvor programmet  
ESCORT CONSOLE PRO 2.12.07 er installert

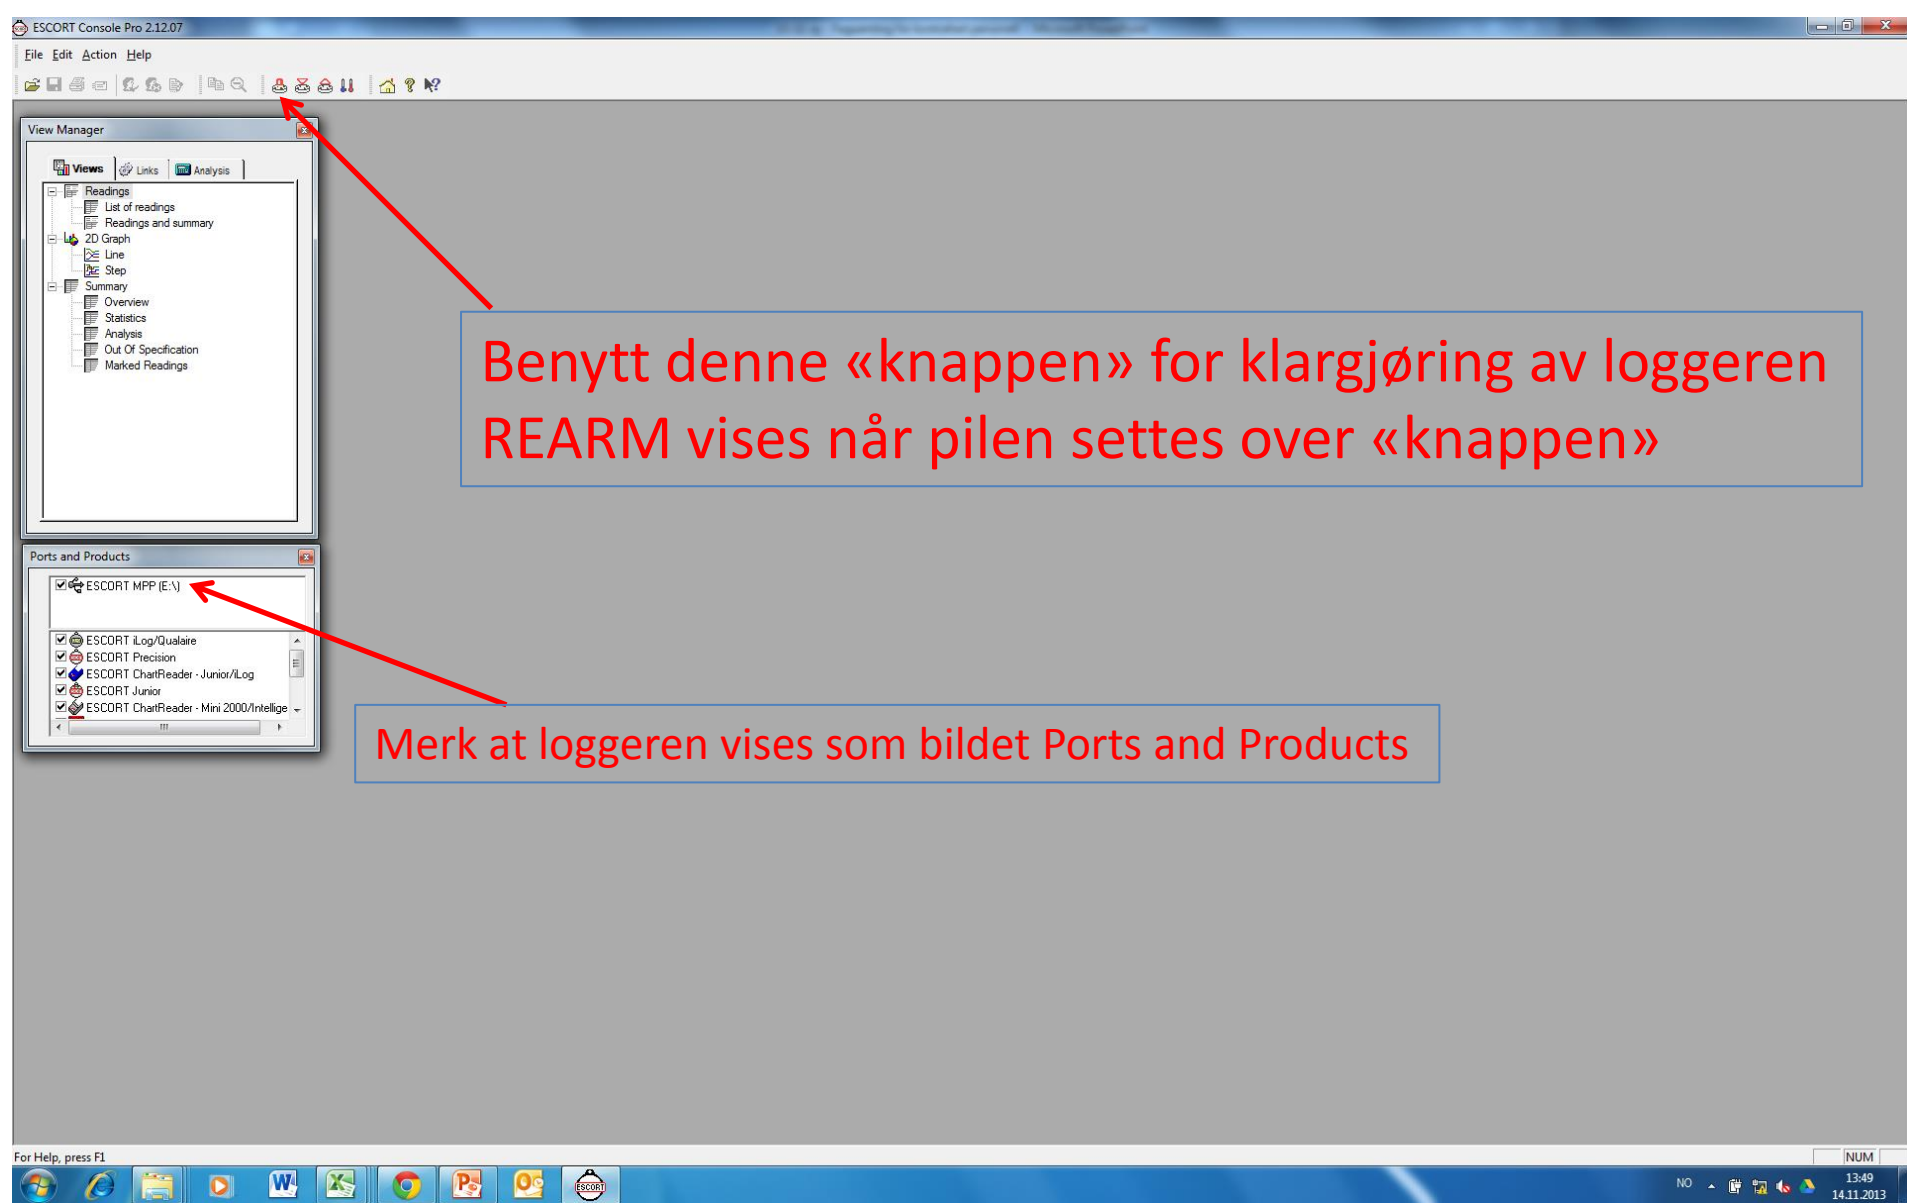

Benytt denne «knappen» for klargjøring av loggeren REARM vises når pilen settes over «knappen»

Merk at loggeren vises som bildet Ports and Products

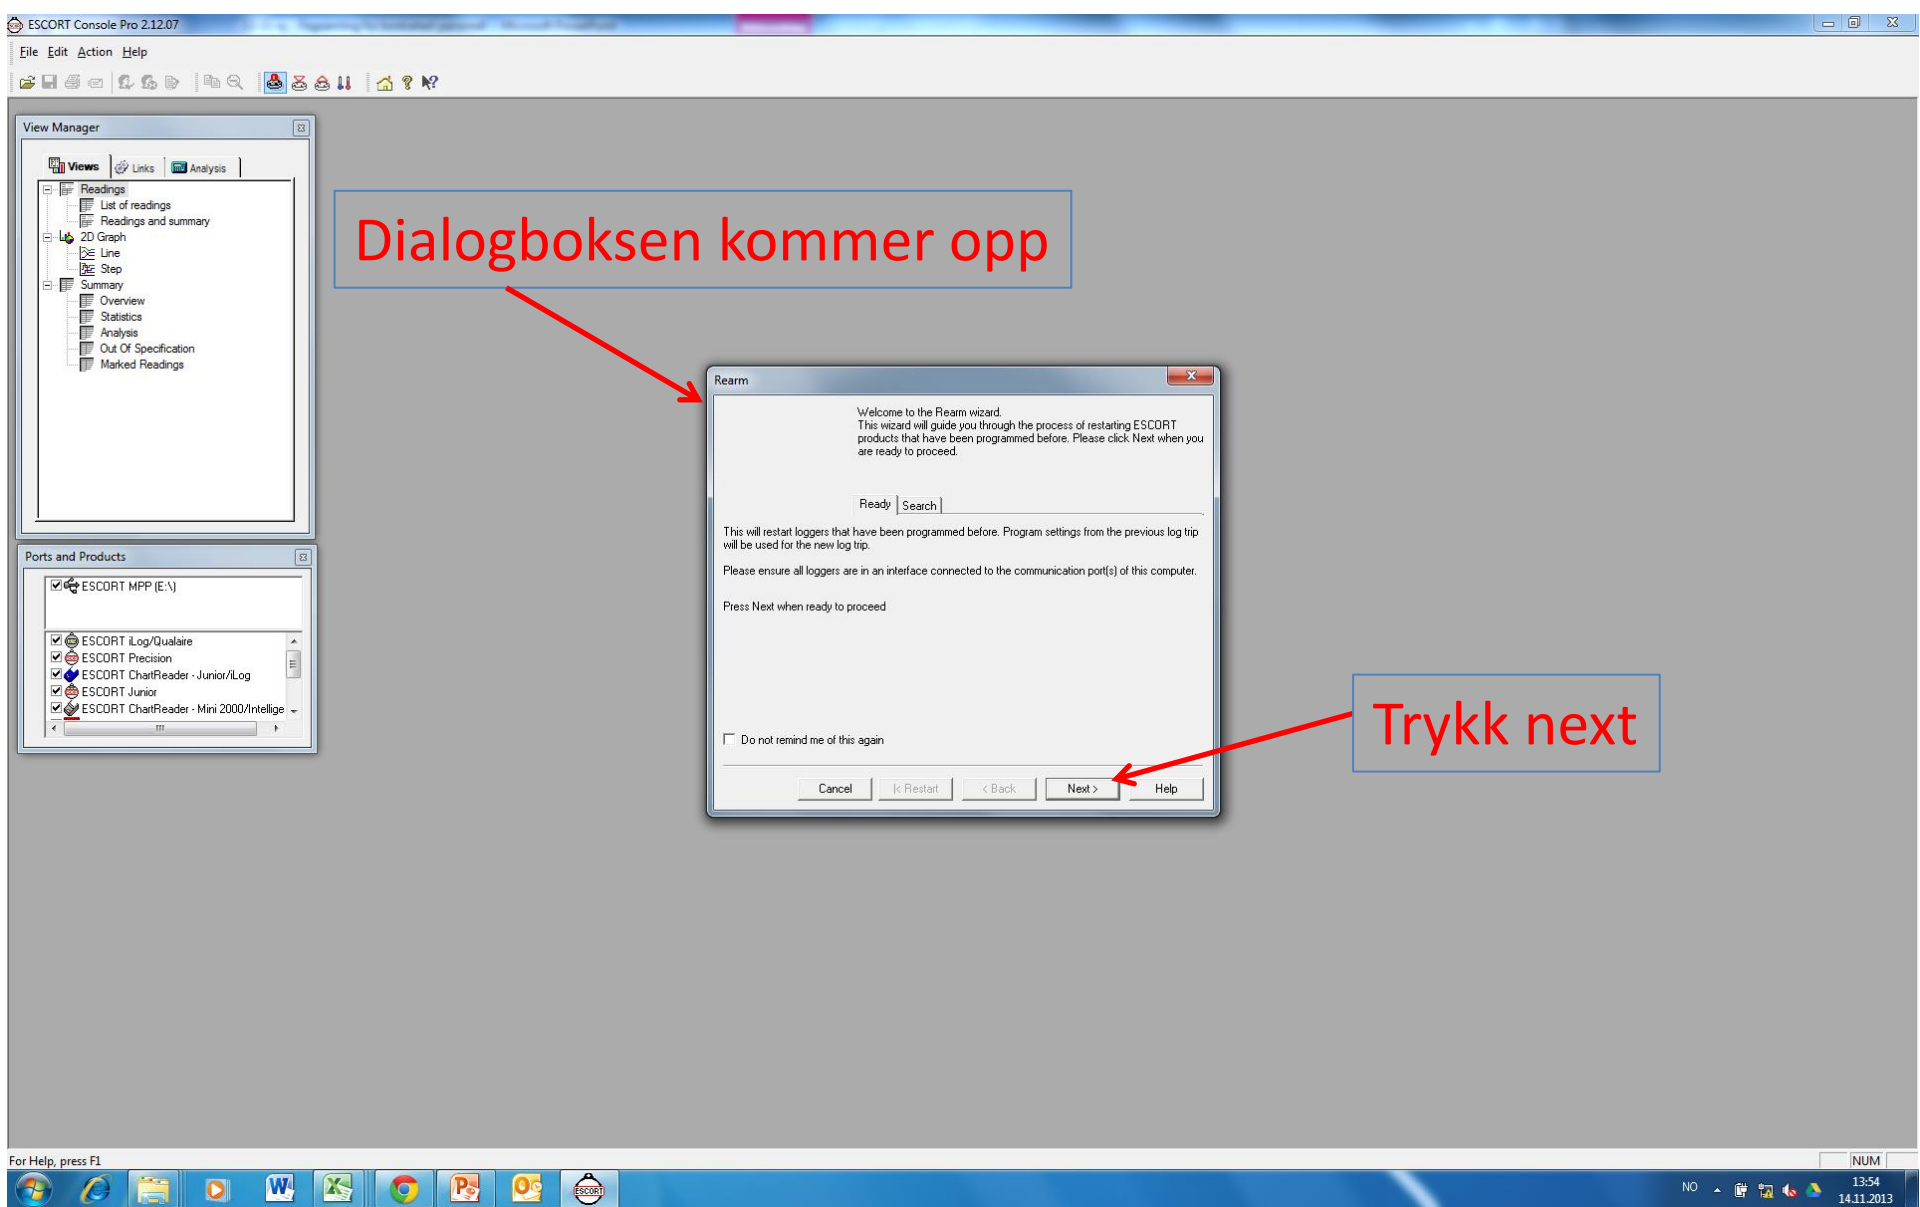



ESCORT Console Pro 2.12.07

File Edit Action Help

View Manager

- Views
- Links
- Analysis

Readings

- List of readings
- Readings and summary

2D Graph

- Line
- Step

Summary

- Overview
- Statistics
- Analysis
- Out Of Specification
- Marked Readings

Ports and Products

- ESCORT MPP (E:\)
- ESCORT iLog/Qualaire
- ESCORT Precision
- ESCORT ChartReader - Junior/Log
- ESCORT Junior
- ESCORT ChartReader - Mini 2000/Intellige

Loggeren kommer til syne i dialogboksen

Rearm

The communication ports are now being checked for ESCORT products. You can select the ESCORT products that you want to rearm by putting a check in the box next to the entry. A cross in that box indicates that this feature is not available for that product. You may click Next when you are ready to continue.

Ready Search Startup Program

Description	Serial Num	Product Code	Communi...
<input checked="" type="checkbox"/> 9906-00 Knappen utlep	MU-CA-0172-0...	MU-IN-D-8-L	E:\

100% Search

Cancel K Restart < Back Next Help


Innholdet i loggeren lastes ned


Trykk Next når nedlasting av innholdet er avsluttet

For Help, press F1

NUM

14:03 14.11.2013

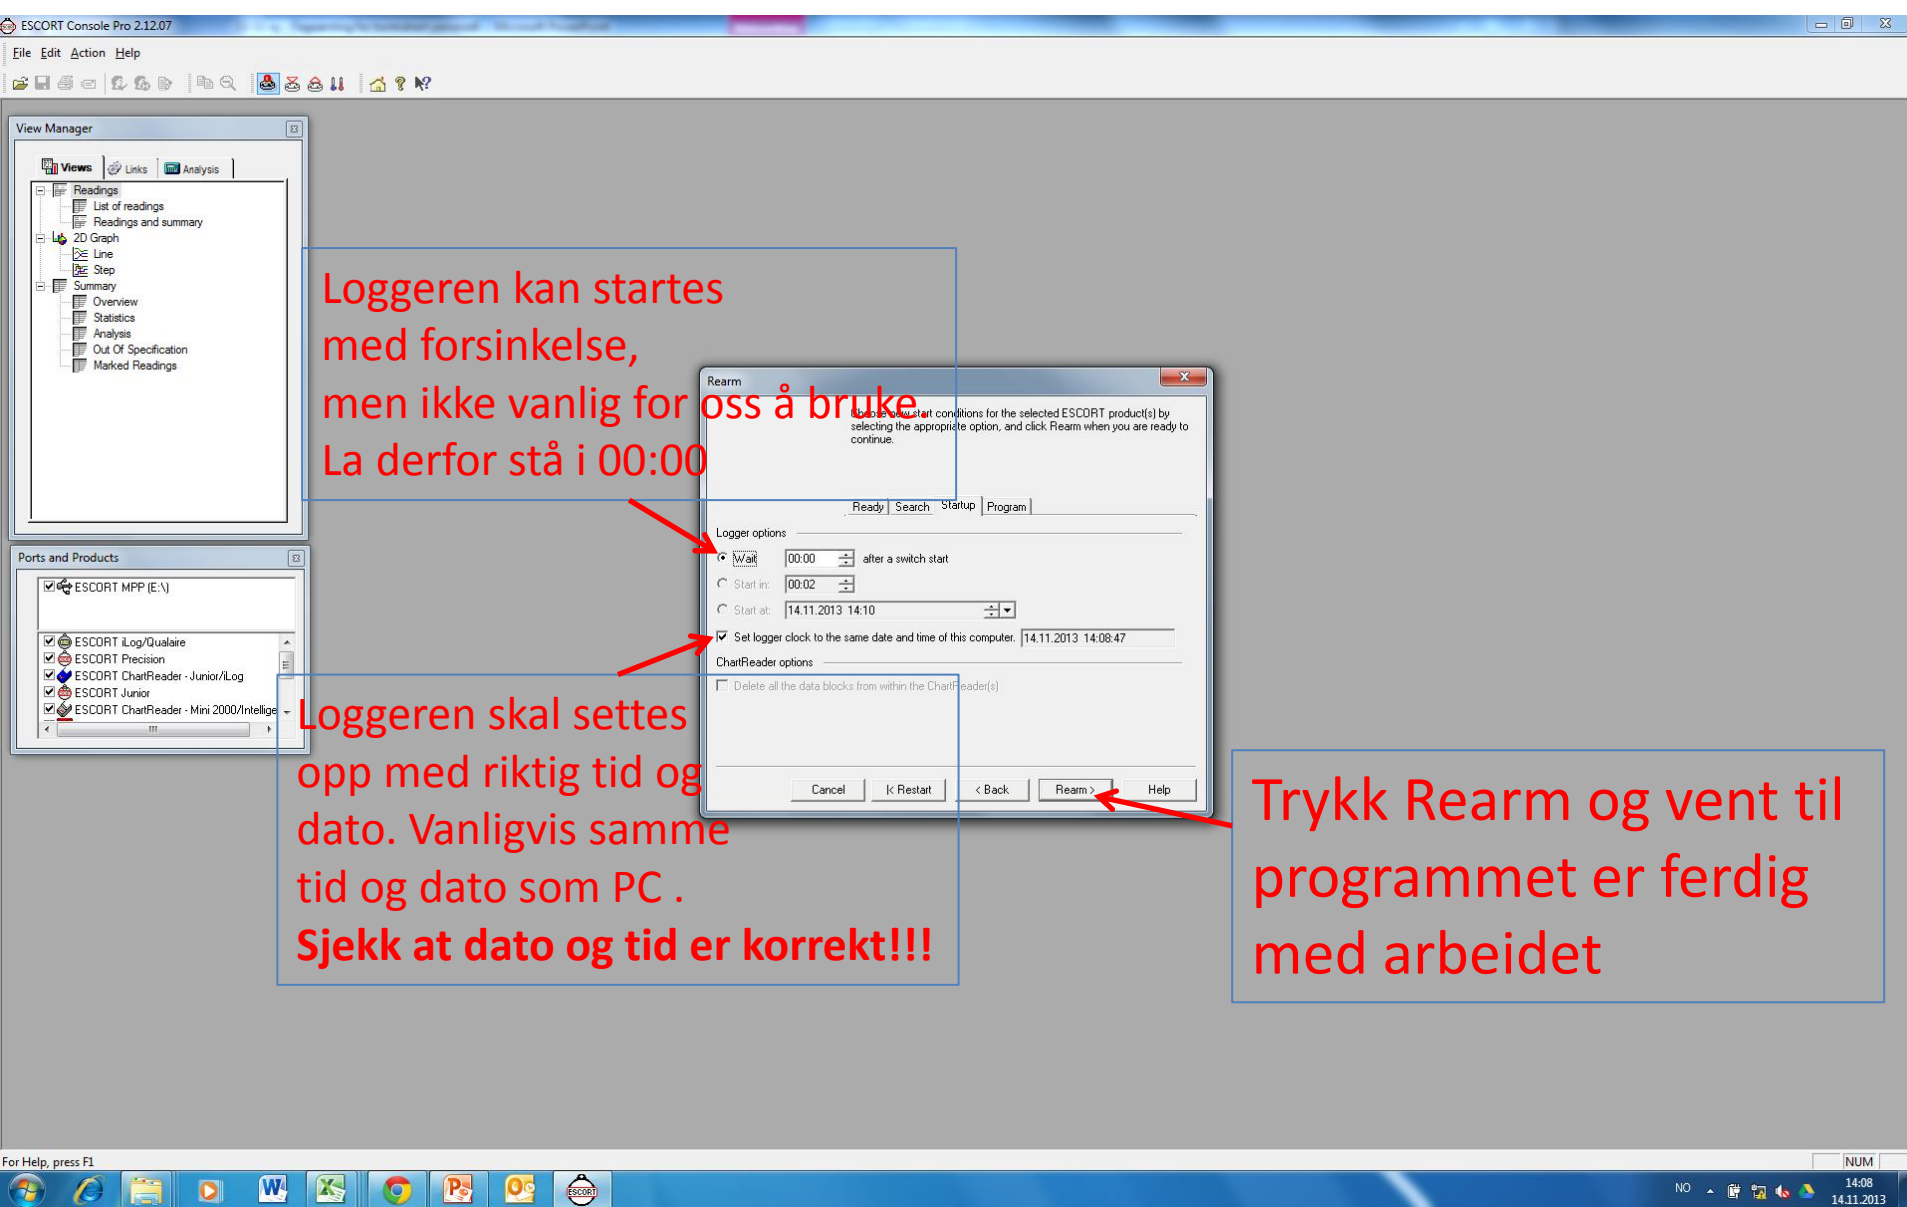

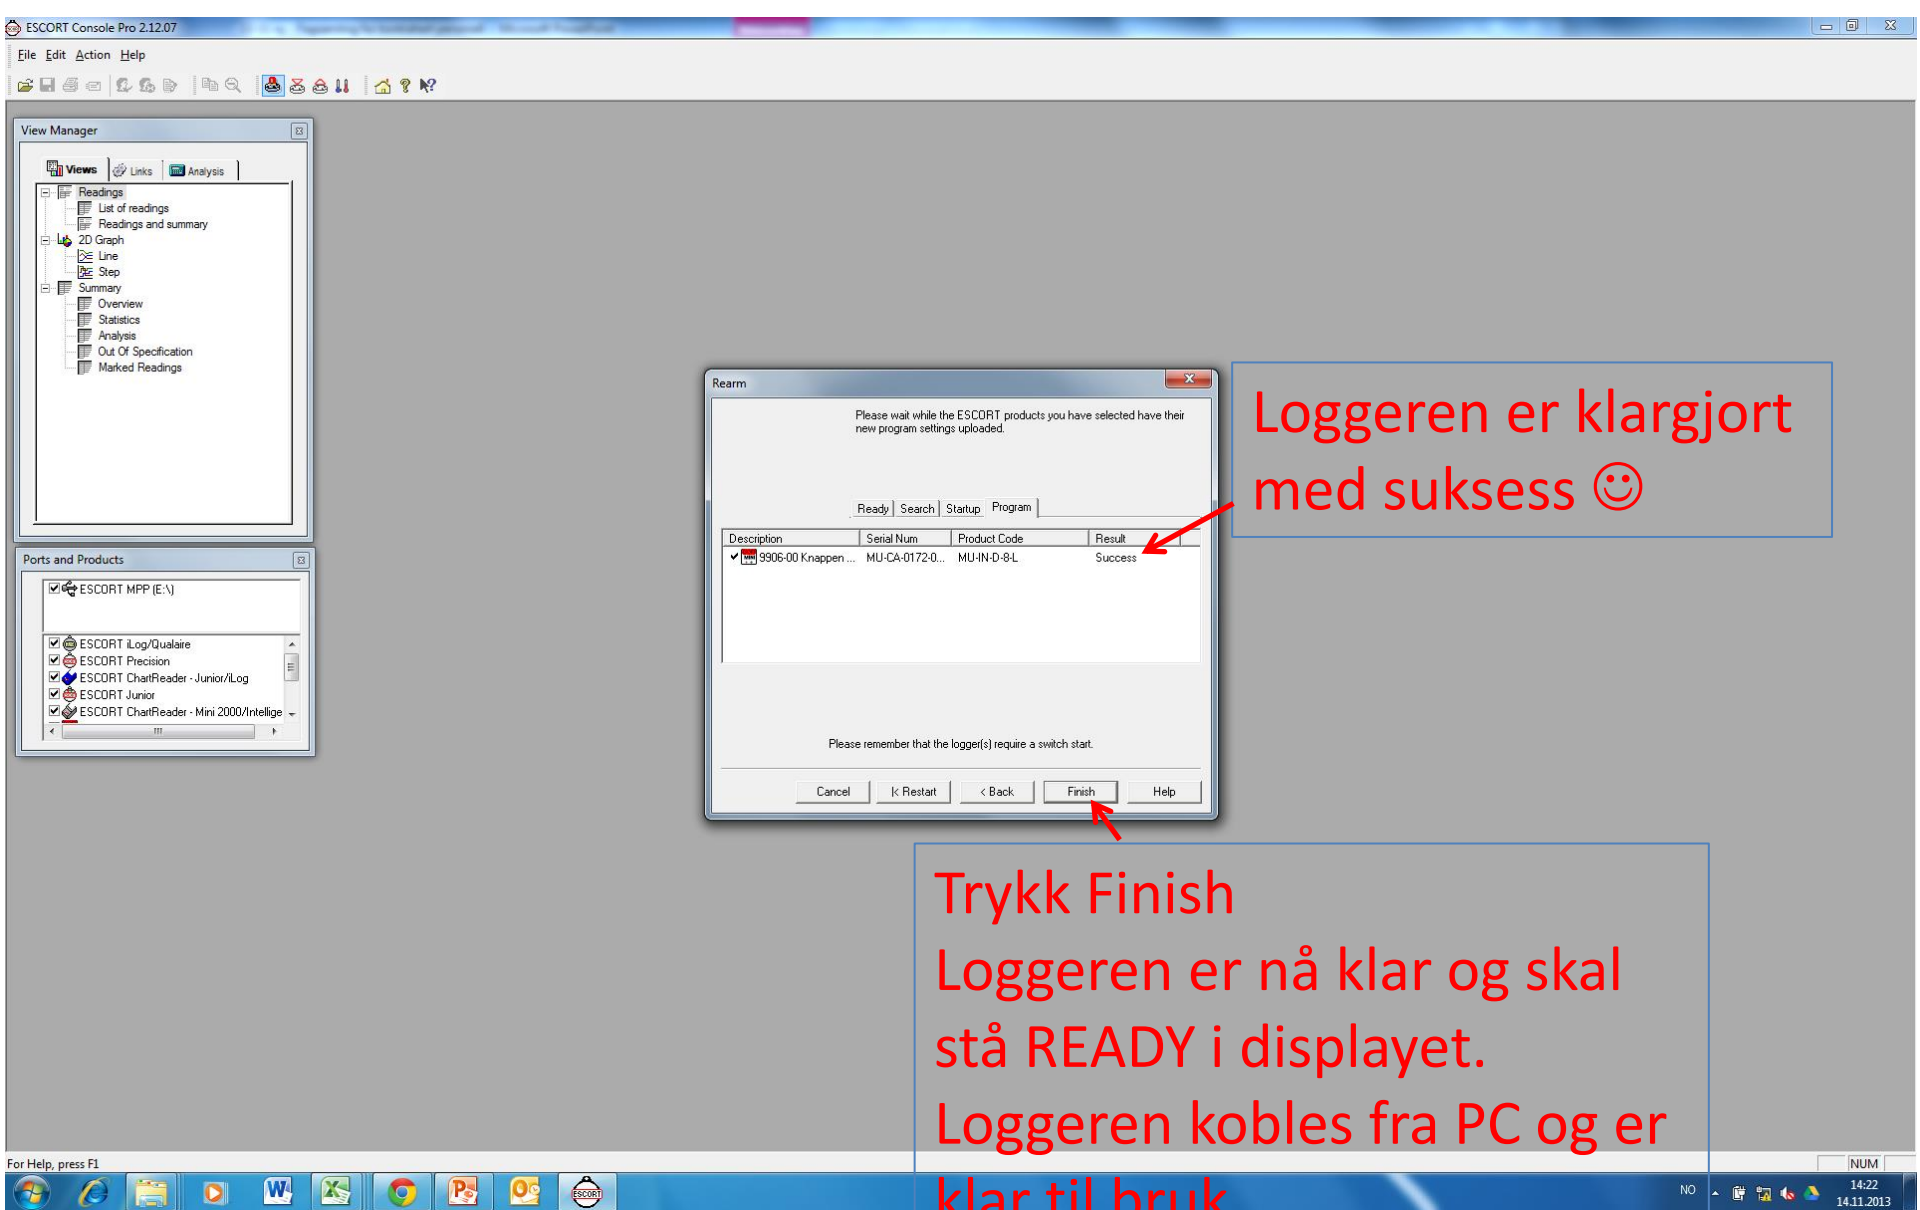

Loggeren er klargjort med suksess 😊

Trykk Finish  
Loggeren er nå klar og skal stå READY i displayet.  
Loggeren kobles fra PC og er klar til bruk

READY i displayet betyr at loggeren er klar til bruk 😊



# Forslag til endringer og forbedringer

**Det vi gjør skal være enkelt og praktisk,  
i samsvar med standarder,  
det skal alltid dokumenteres,  
og alltid være basert på kompetanse**

”Kompetanse er de samlede **kunnskaper, ferdigheter, evner og holdninger** som gjør det mulig å utføre aktuelle funksjoner og oppgaver i tråd med definerte krav og mål” (Linda Lai, 2004)



# Neste fagsamling for kontrahert personell tirsdag 4. mars 2014



[www.dihva.no](http://www.dihva.no)

